 


ATTENTION!

TREADMILL MUST BE LUBRICATED WITH 30ml OF SILICONE ONCE EVERY 20 HOURS OF USE OR ONCE PER MONTH TO MAINTAIN OPERATION.


TO LUBRICATE, LIFT MAT AND SPRAY SILICONE ONTO THE RUNNING DECK, ENSURING SILICONE REACHES THE CENTRELINE OF THE DECK, ALL AROUND IMPACT OR FOOTFALL AREA. THE ENTIRE WIDTH OF THE DECK MUST BE COVERED

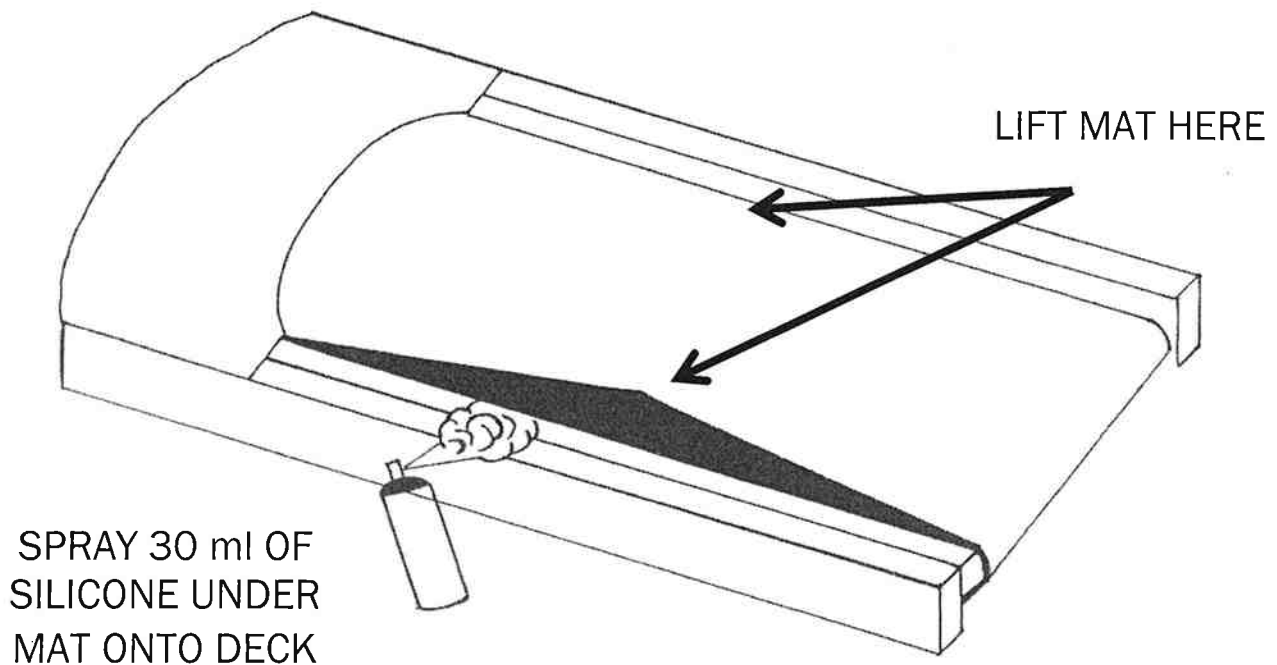


SILICONE & ONLY 100% HIGH QUALITY SILICONE LUBRICANT MUST BE USED AS LUBRICANT. WD40 & OLIS ARE NOT SUITABLE. WE STRONGLY RECOMMEND INFINITI SILICONE LUBRICANT, AN INFERIOR QUALITY LUBRICANT MAY VOID YOUR WARRANTY. IF YOU ARE UNSURE ABOUT LUBRICATION PROCEDURE, CONTACT YOUR LOCAL DEALER.

WARNING! TREADMILLS NOT MAINTAINED WITH SILICON ARE NOT COVERED BY WARRANTY

 Table Of Contents

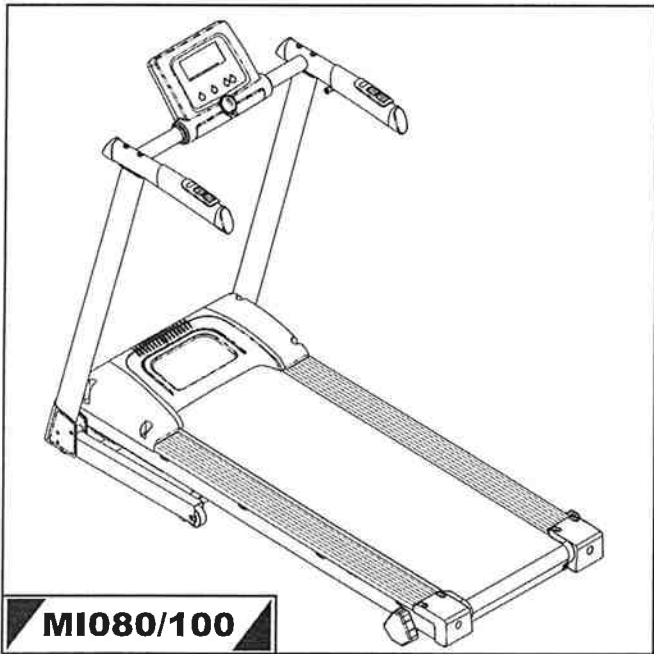

MI080/100

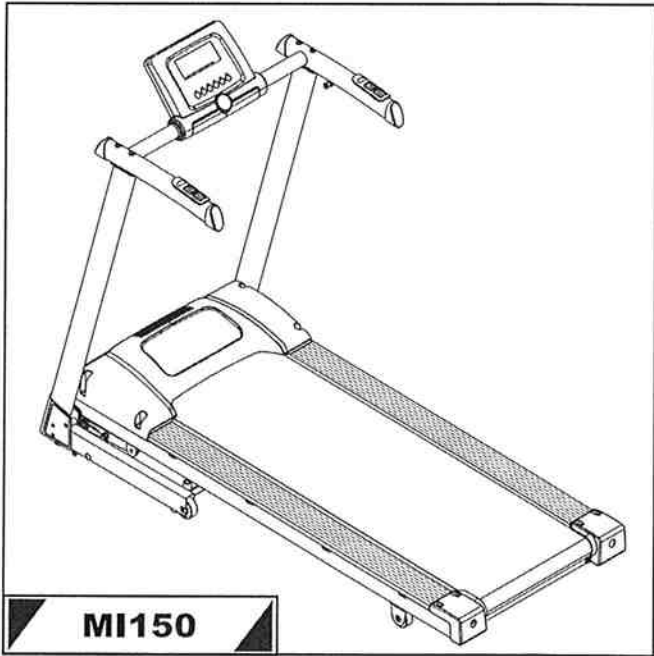 

MI150

Congratulations on the purchase of your new motorized treadmill. To help ensure the enjoyable and trouble-free operation of your new treadmill, we strongly suggest you read this manual carefully and follow its recommendations.

- **Important Safety Instruction**1
- **Assembly Instruction**
 - MI080/1002
 - MI1503
 - MI080/100/1504
- **Console Operation**
 - MI080/100.....5
 - MI1507

- **Preset Program**
 - MI080/10010
 - MI15011
- **Utilization**12
- **Maintenance**13

IMPORTANT SAFETY INSTRUCTIONS

DANGER

- To reduce the risk of electric shock

 
Always unplug this appliance from the electrical outlet immediately after using and before cleaning.

- ◆ Use this appliance only for its intended uses as described in this manual. Do not use attachment not recommended by the manufacturer.
- ◆ To disconnect, turn all controls to the off position, then remove plug from outlet.
- ◆ Connect this appliance to properly grounded outlet only. See Grounding Instructions.
- ◆ The appliance is intended for household use.
- ◆ When you are not going to use your treadmill, or when finishing, please remove the safety key from the console then always position the safety key where the children can not take.
- ◆ Do not use outdoors.
- ◆ Always unplug the treadmill from the electrical outlet immediately after using and before cleaning, assembling or servicing.
- ◆ Never leave the treadmill unattended when plugged in. Disconnect by turning off the master power switch and unplugging from outlet.
- ◆ Never operate this treadmill if it has a damaged cord or plug, is not working properly, if it has been dropped or damaged or if it has been exposed to water.
- ◆ Do not operate where aerosol products are being used or where oxygen is being administered.
- ◆ Don't pull the treadmill by its power cord or use the cord as a handle.
- ◆ Keep close supervision if this treadmill is used by, or near children, persons with disabilities or pets.
- ◆ Keep dry. Do not operate this treadmill in wet or moist conditions.
- ◆ Never insert any object into any opening.
- ◆ Before using the treadmill, always warm up your muscles to prevent the exercise injury.

- ◆ Please unplug the electrical cord from the electrical outlet, and always prevent the children from danger because of careless touching
- ◆ Keep electric cord away from heated surfaces.
- ◆ Keep hands clear of all moving parts. Never place hands or feet under the treadmill.
- ◆ Before each use, check that the running belt is aligned and centered on the treadmill bed and all visible fasteners on the treadmill are sufficiently tightened and secure.
- ◆ Keep the treadmill on a solid, level surface with sides at least two feet from any walls. Be sure the area around the treadmill remains clear during use and has adequate clearance.

NOTE:

Failure to follow these instructions may lead to personal injury and cause damage to the treadmill. To reduce the risk of burns, fire, electric shock, please keep the following in mind:

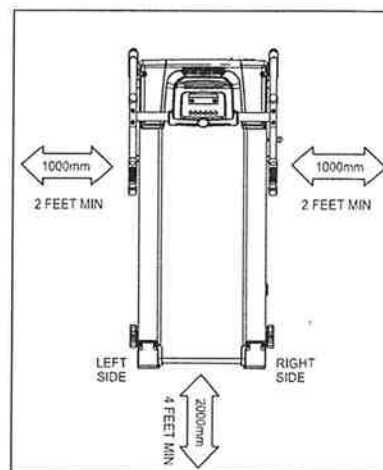

ELECTRICAL GROUNDING INSTRUCTIONS

 
This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This treadmill is equipped with a cord having equipment grounding connector and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

⚠ Danger

Improper connection of the treadmill grounding connector can result in the risk of electric shock. Check with a qualified electrician, if you are in doubt as to whether the product is properly grounded. Don't modify the plug provided with the treadmill. If it won't fit your outlet, have a properly grounded outlet installed by a qualified electrician

⚠ Warning

Never use extension cords between the treadmill and wall outlet.

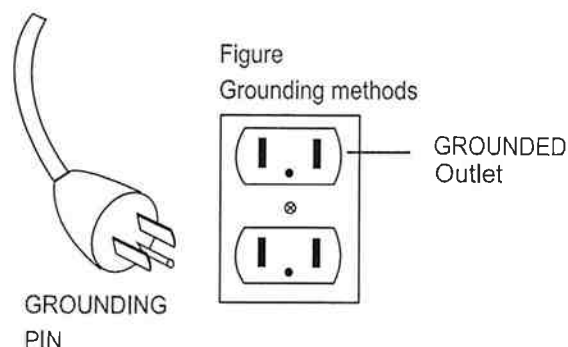

MI080/100

 
ASSEMBLY INSTRUCTION

Warning

After unpacking the fitness equipment, examine it carefully for possible damage. If there is any damage or there are missing parts, please contact your retailer or an authorized repair facility for assistance.

This treadmill is shipped with all parts and tools necessary for assembly. Please read this entire manual thoroughly before assembling. We recommend assembling the treadmill on the shipping carton. Ensure the floor is solid, level and clean.



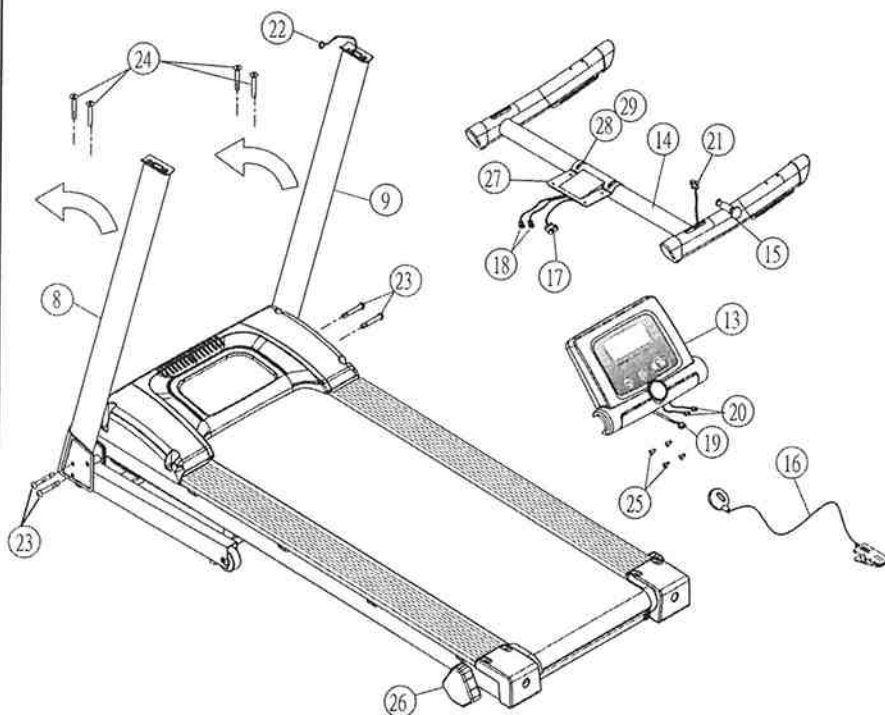





Parts








 
- #8 Support handle-Left
- #9 Support handle-Right
- #10 Base frame
- #13 Console
- #14 Completed handlebar set
- #15 Locking knob for folding
- #16 Safety key
- #17/#21 PCB cable-Middle
- #18 Hand pulse cable-Lower
- #19 PCB cable-Upper
- #20 Hand pulse cable-Lower
- #22 PCB cable-Lower
- #23 Base frame screws x 4 pcs
- #24 Handlebar screws x 4 pcs
- #25 Console screws x 4 pcs
- #26 Elevation block
- #27 Console bracket
- #28/#29 Screw and washer for console position adjustment

Hardware tool

Screw attached on machine

M8*45L(4PCS)  	M4*10L(4PCS)  	M8*15L(2PCS)  	M8(2PCS)  
---	---	---	--

Screw packed by poly bag

M5(1PCS)  	M6(1PCS)  	M8*65L(4PCS)  
---	---	---

 
Make sure of the screws already on the machine and in the tooling bag.

MI150 ASSEMBLY INSTRUCTION

Warning

After unpacking the fitness equipment, examine it carefully for possible damage. If there is any damage or there are missing parts, please contact your retailer or an authorized repair facility for assistance.

This treadmill is shipped with all parts and tools necessary for assembly. Please read this entire manual thoroughly before assembling. We recommend assembling the treadmill on the shipping carton. Ensure the floor is solid, level and clean.

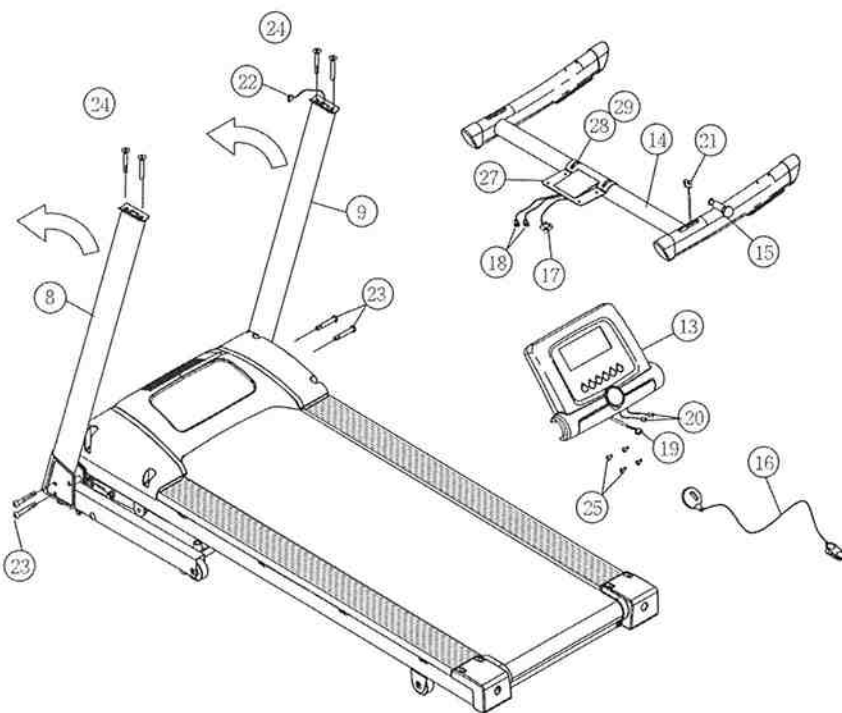





Parts




- #8 Support handle-Left
- #9 Support handle-Right
- #10 Base frame
- #13 Console
- #14 Completed handlebar set
- #15 Locking knob for folding
- #16 Safety key
- #17/#21 PCB cable-Middle
- #18 Hand pulse cable-Lower
- #19 PCB cable-Upper
- #20 Hand pulse cable-Lower
- #22 PCB cable-Lower
- #23 Base frame screws x 4 pcs
- #24 Handlebar screws x 4 pcs
- #25 Console screws x 4 pcs
- #27 Console bracket
- #28/#29 Screw and washer for console position adjustment

Hardware tool

Screw attached on machine

M8*45L(4PCS)  (23)	M4*10L(4PCS)  (25)	M8*15L(2PCS)  (28)	M8(2PCS)  (29)
--	--	--	---

Screw packed by poly bag

M5(1PCS)  (11)	M6(1PCS)  (12)	M8*65L(4PCS)  (24)
--	--	--

Make sure of the screws already on the machine and in the tooling bag.

MI080/100/150 ASSEMBLY INSTRUCTION

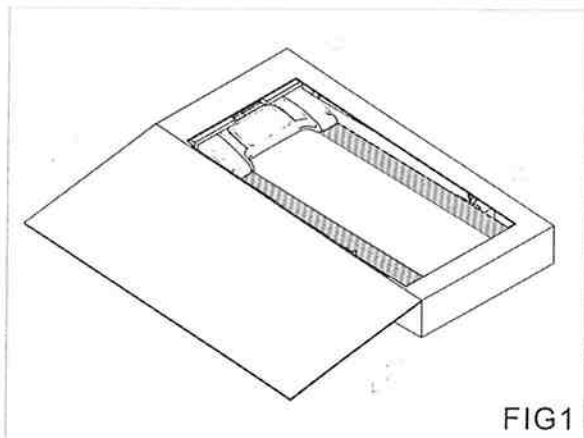 


FIG1

1. Tear off and pave flat of the packing paperboard.

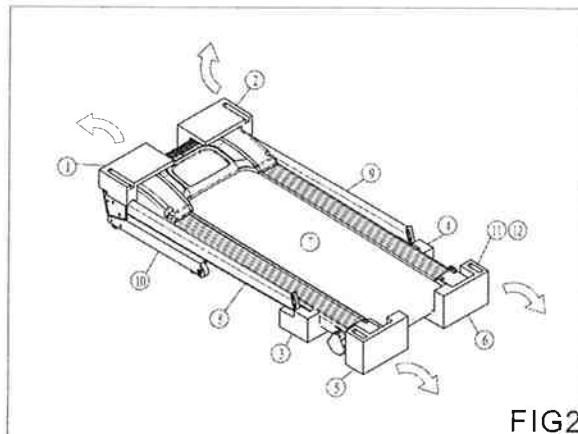 


FIG2

1. Take away of the packing plastic sheet and the Styrofoam (#1,2,5,6). Keep the Styrofoam (#3,4).
2. Move off manual bag which you can find tools (#11,12) inside of the bag and the screws (#24 x 4 pcs) are taped outside of bag.

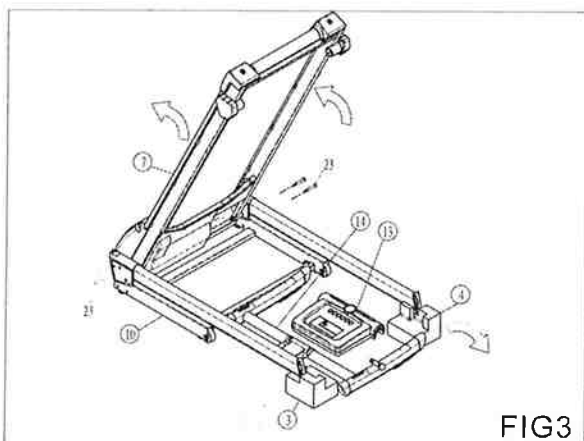 


FIG3

1. Carefully lift (as showing on the above picture) the frame(#7) and hold it on also carefully.
2. Move off the console(#13) and the completed handlebar set (#14) first, then move off the Styrofoam (#3,4).
3. Lay down carefully the frame.
4. Move off 4 pieces base frame screws (#23).

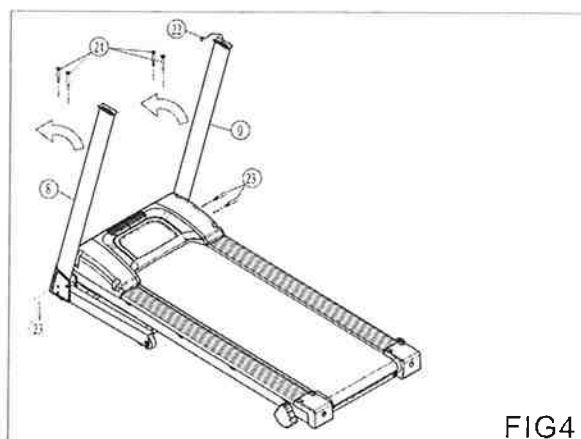 


FIG4

1. Swivel up the support handle-Left (#8) to upright position, lock back the 2 pieces base frame screws (#23) by using tool #11.
2. Repeat the assembly on the support handle-Right (#9)

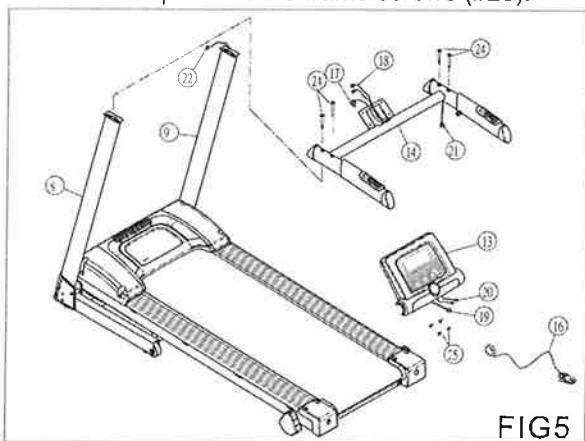 


FIG5

1. Lay the completed handlebar set (#14) on the support handles, face to face connect PCB cable-middle(#21) and PCB cable-Lower (#22), and insert the cable into tube.
2. Lock tight the completed handlebar set on support handles with the 4 pieces of screws (#24) as shown on above picture.

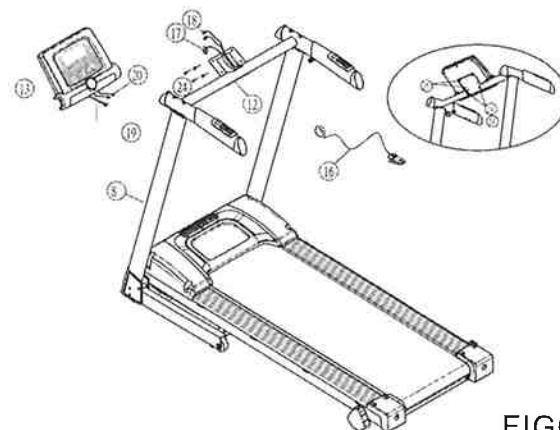 


FIG6

1. Move off the 4 pieces screws (#25) on the back of console.
 2. Connect PCB cable-lower (#17) and PCB cable-upper (#19).
 3. Connect hand pulse cable-lower (#18) and hand pulse cable-upper (#20).
 4. Fix console on console bracket and lock tight with screws (#25).
- Noted: you can adjust the position of console by screw and washer(#28,#29)