




## TREADMILL RUNNING BELT LUBRICATION

Lubrication of Infiniti treadmills is essential to operation. The treadmill must be lubricated with 20ml of silicone once every month or every 20 hours of use, whichever comes first. To lubricate, lift running belt as high as possible about halfway along. Insert straw from silicone bottle so it reaches to the middle of the belt area. Start pumping whilst withdrawing straw towards the edge. **25** pumps are required on each side. Repeat procedure on opposite side. If belt is stuck under side rail, use a screwdriver to lever out. The entire width must be covered.

Cover full width.  
25 pumps per  
side.

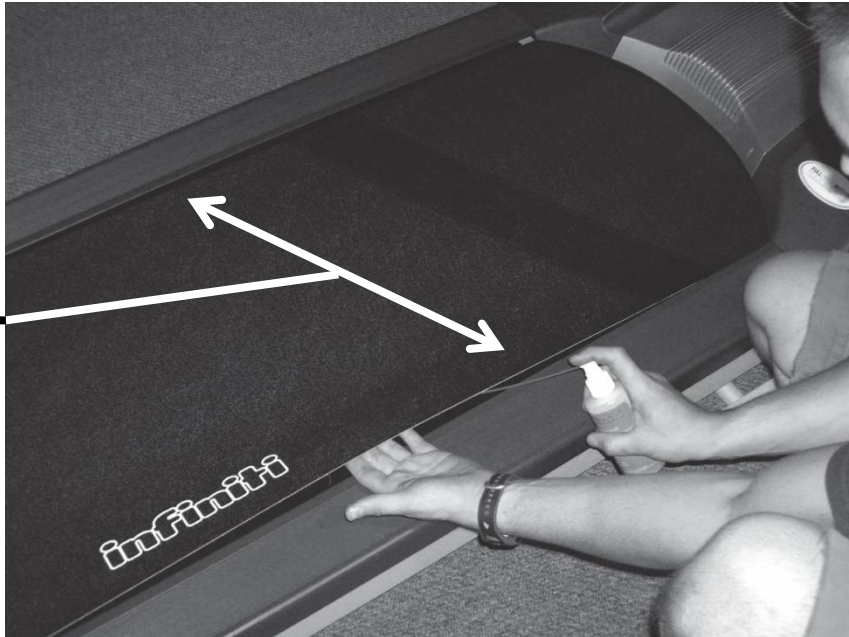

Lift belt as  
high as  
possible

**ONLY INFINITI SILICONE MAY BE USED.** Many market silicones contain petroleum additives which are destructive. No aftermarket lube kits such as “Lube & Walk” are to be used. Infiniti silicone may be purchased from your local dealer for Infiniti Fitness. If unsure about lubrication procedure, contact your local dealer or Infiniti Fitness.



**WARNING!** Warranty void if treadmills are not maintained with silicone correctly!